

### READ AND SAVE THESE INSTRUCTIONS

#### PARTS

- |                             |                    |
|-----------------------------|--------------------|
| A) 33.8mm Threaded Pin      | D) Allen wrench    |
| B) 34.5mm Threaded Pin      | E) Downrod coupler |
| C) Allen set screws (4 pcs) |                    |

#### DOWNROD ASSEMBLY

Install the first downrod to the fan motor per the Installation Manual supplied with the fan. Refer to the section "Hanging The Fan".

#### REMEMBER TO TURN OFF POWER BEFORE BEGINNING INSTALLATION

Step 1. Loosen the two set screws from the motor coupling. Remove the hitch pin and lock pin if installed to the motor coupling.

Step 2. Remove hanger ball from the downrod assembly included with the fan by loosening the set screw and removing the cross pin. Remove the hitch pin and lock pin if installed to downrod.

Step 3. Carefully feed fan wires up through one of the accessory downrods. Thread the downrod into the motor coupling until the holes are lined up. Replace the lock pin and hitch pin previously removed. Tighten set-screws.

**NOTE:** Some of the following parts might not be included with the fan model you purchased. Please refer to the illustration shown in the fan's owner's manual.; Slip coupling cover, canopy cover, canopy ring and canopy onto downrod.

#### DOWNROD COUPLER ASSEMBLY

Refer to illustrations from this instruction manual.

Step 1. Feed wires through the unthreaded side of the downrod coupler (E) and place it onto the downrod already installed on the fan. Align holes and secure with 33.8mm threaded pin (A). Install two Allen set-crews (C) and securely tighten with Allen wrench (D). Do not over-tighten.

Step 2. Feed wires through the threaded side of the second downrod. Thread downrod to the downrod coupler until tight and the holes are lined up. Secure with 34.5mm threaded pin (B). Install two Allen set-crews (C) and securely tighten with Allen wrench (D). Do not over-tighten.

Step 3. Carefully install the hanger ball onto the downrod, being sure that the cross-pin is in the correct position and tighten set screw.

Step 4. Now lift the motor assembly into position and place the hanger ball into hanger bracket. Rotate until the check groove has dropped into the registration slot and sits firmly. Rod should not rotate if this is done correctly.

Follow the steps from the instruction manual included with your fan to complete the installation of your fan.

