


## **COLOGNE COLLECTION**


## SINGLE KNOB(TO BE PAIRED WITH SINGLE SDH)


2557503



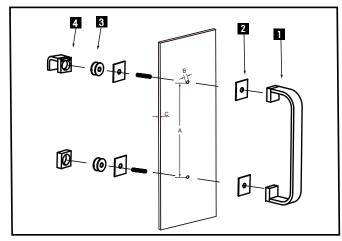


- 1. Knob x 1
- 2. Clear Gasket x 2
- 3. Fixing Bracket x 1
- 4. End Cap x 1

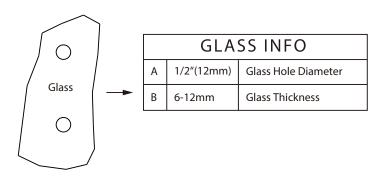


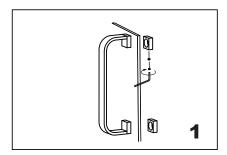


Install the hook (bolt) throught the glass hole, make sure the rubber gaskets are between knob&glass.

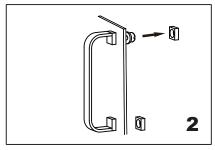

Screw in the fixing bracket into the hook bolt.

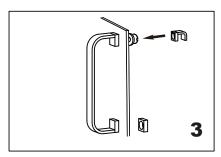

Add the end cap on the fixing bracket,make sure the set screw hole in the bottom.

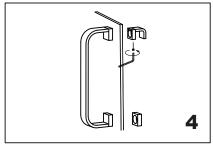

Fix the set screw on the end cap, tighten it to avoid loose from fixing brackets.