



INSTALLATION GUIDE

Waterbridge 900-Series Exposed Showers

Oct 2017

WaterBridge Thermostatic Exposed Showers are available in four standard wall-mounted configurations:

- | | |
|-------------------|---|
| WB-SHW-940 | Rain head only |
| WB-SHW-950 | Rain head and handshower |
| WB-SHW-970 | Rain head and tub filler / footwash |
| WB-SHW-980 | Rain head, handshower, and tub filler / footwash |

Custom showers are available by special order. Please contact Sonoma Forge for more info.



It is strongly recommended that this, and all fixtures, be installed by a professional plumber.


Waterbridge Thermostatic Exposed Showers are installed onto 3/4" pipe thread, 10-3/4" center-to-center.



INSTALLATION GUIDE

Waterbridge 900-Series Exposed Showers

Oct 2017

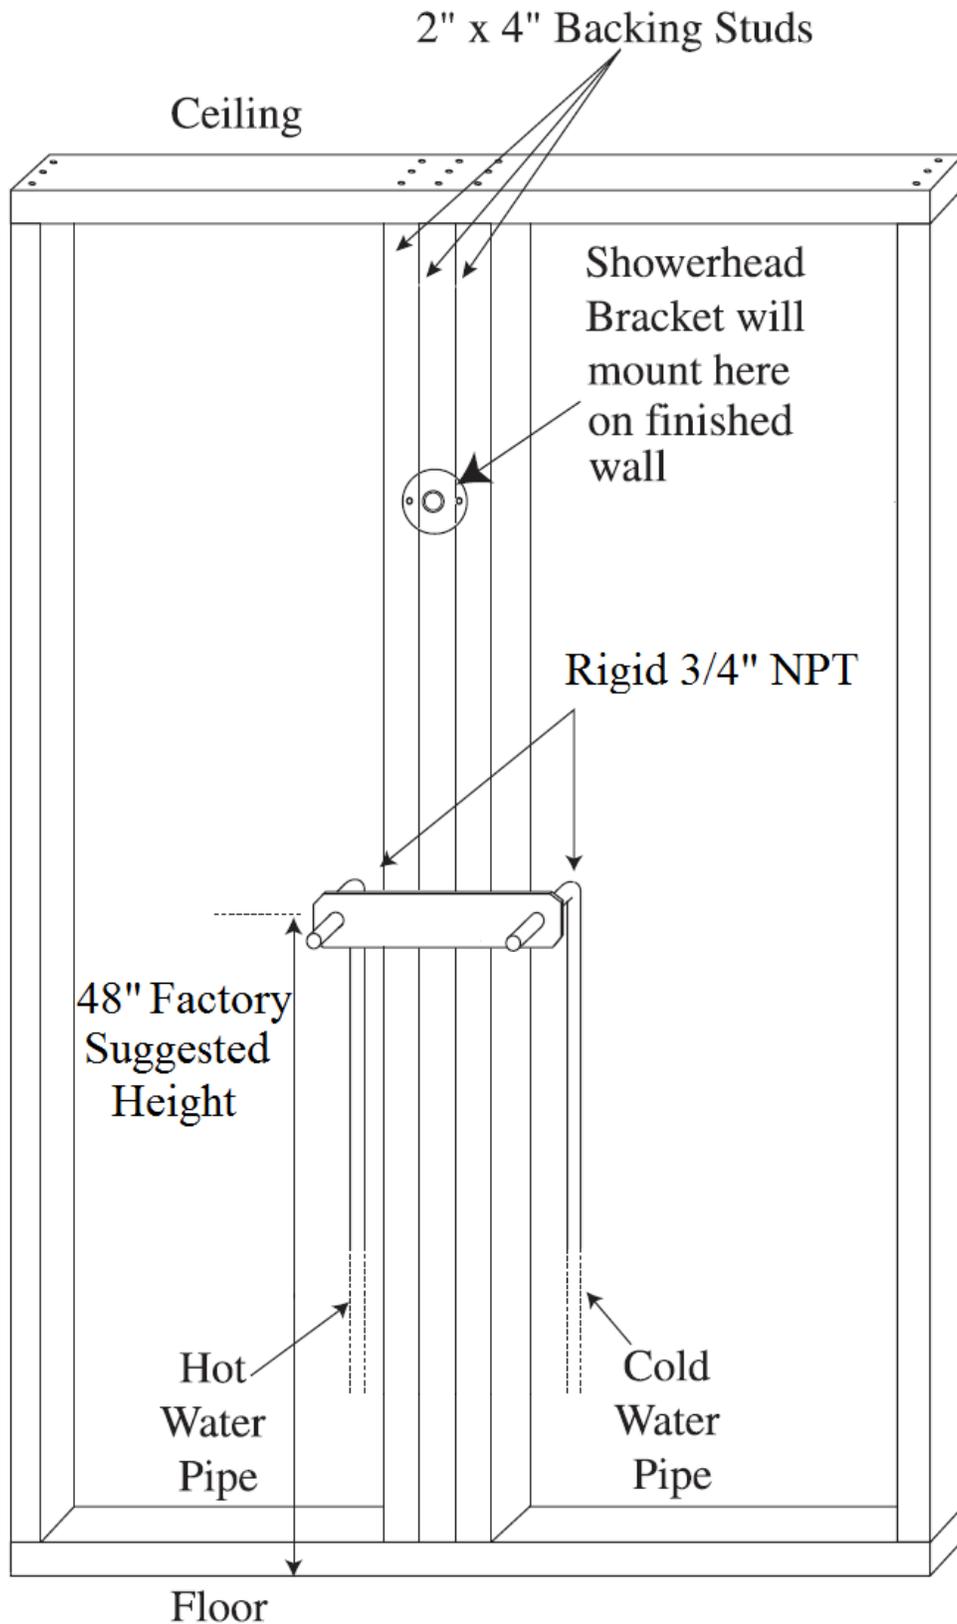




INSTALLATION GUIDE

Waterbridge 900-Series Exposed Showers

Oct 2017

- 1) Determine a height for the rain head. The face of the rain head is 36" from the center of the inlets.
- 2) Additional framing should be installed in the wall behind the mounting bracket for support.
- 3) Plumb 3/4" NPT pipe and secure it in the wall.
- 4) The 3/4" female adapter is 1-1/4" O.D. and screws 1-1/16" into the finished wall. This and your plumbing will support most of the shower's weight.

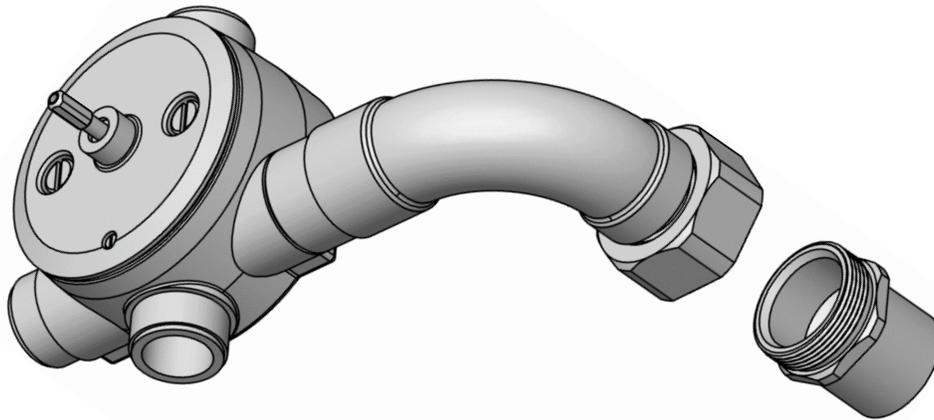

For Shower Models with Tub Filler/Foot Wash (970 & 980):

Install the spout and/or optional extension(s) prior to installing the shower on the wall.

- 5) Hold the shower against the wall and tighten the compression nuts.
- 6) Using a level, the upper mounting bracket should now be attached to the wall using the supplied screws.
- 7) For **Models 950 & 980**, a separate wall bracket is included for the hand wand. Remove the internal mounting bracket from the back by loosening the set screw. Mount the bracket on the wall with provided hardware. Affix the wall bracket with set screw pointing down, then tighten set screw.

Ensure that the hose does not have any negative tension when not in use, as it will unravel over time.



INSTALLATION GUIDE

Waterbridge 900-Series Exposed Showers

Oct 2017

- 8) Install the shower arm. Teflon tape **must** be used on the threads.
- 9) Install the rain head:
 - a) Unscrew the collar from the top of the rain head.
 - b) Using a 5/16" Allen wrench, thread the ball joint through the collar and into the shower arm until secure.
 - c) Supporting the head, tighten the collar back on to the top of the head.

Note: The shower head is shipped with a flow restrictor inside of the ball joint. Use of the rain head without restriction **will** cause damage to the head.



Ball joint with Allen Wrench

- 10) Turn water supply on and check for leaks.
- 11) Check volume controls and shut-off valves for proper function.

Care & Maintenance: No abrasives should be used to clean Sonoma Forge products. Mild soap and water can be used, and 100% carnauba wax can be applied to protect the finish.

All exterior plumbing should be winterized if freezing temperatures are expected.