


## ASSEMBLY INSTRUCTIONS

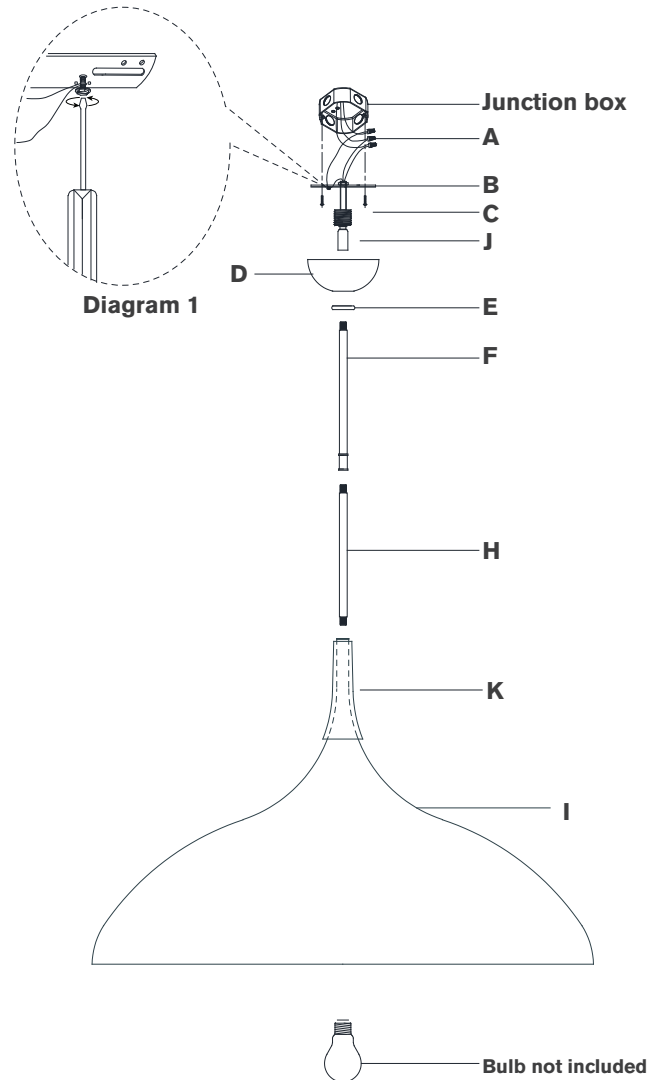

## Agnes Large Pendant

Item # ARN 5352

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver

Slotted Screwdriver

Wire Cutters

Wire Strippers

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove collar ring **(E)** from lock collar **(J)**.
3. Feed fixture wire and ground wire through bottom rod **(H)** and connect to fixture body **(I)**.
4. Continue feeding wires through collar ring **(E)**, canopy **(D)**, top rod **(F)** and lock collar **(J)**.


**NOTE:** It is recommended to have a helper to assist in supporting the fixture for steps 5-7.

5. Holding fixture body **(I)** upright, slide collar ring **(E)** and canopy **(D)** down bottom rod **(H)** and rest on fixture body **(I)**.

**NOTE:** Slide components down slowly to avoid damages.

6. Connect top rod **(F)** to bottom rod **(H)**, and lock collar **(J)** to top rod **(F)**. Secure mounting plate **(B)** to lock collar **(J)** using wrench to tighten locknut.
7. Install fixture by the mounting plate **(B)** to junction box using mounting screws **(C)**.
8. Cut excess wires, being sure to leave about 6" to reach the junction box. Separate black and white wires, and strip insulation on each 5/8".

## ASSEMBLY INSTRUCTIONS

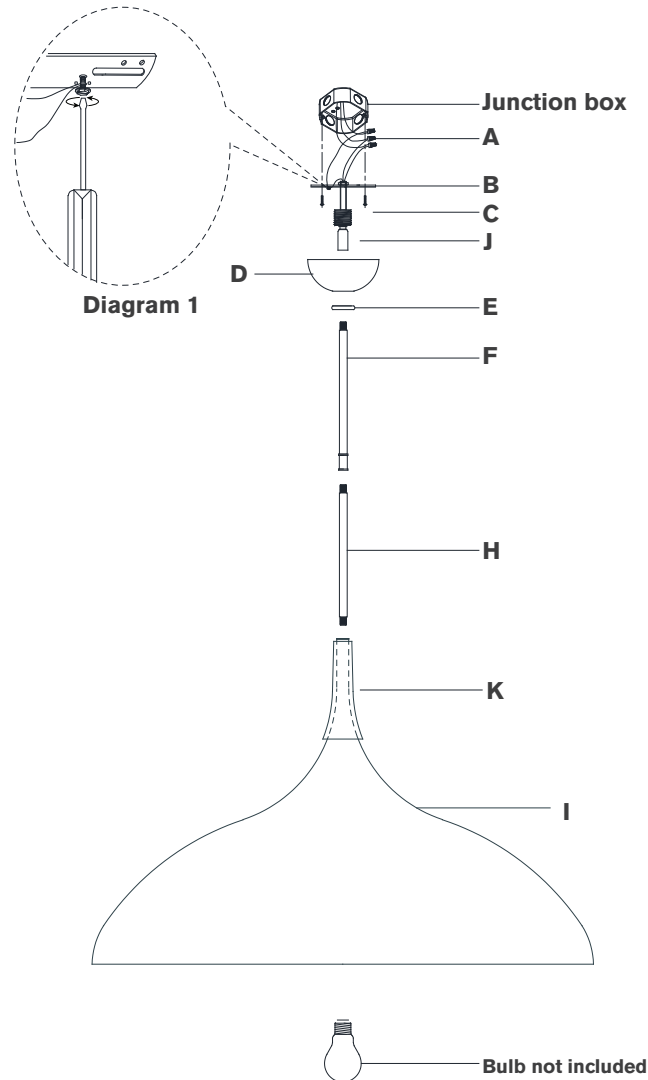

## Agnes Large Pendant

Item # ARN 5352

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).

**NOTE:** It is imperative that the fixture is grounded.

10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut (A).
11. Connect fixture hot wire (black) to the supply hot wire (usually black) using wire nut (A).

**CAUTION:** Do not reverse the hot and neutral connections.

12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install canopy (D) to mounting plate (B) by securing with collar ring (E).
14. Carefully remove foam (K) packaging from top of shade.
15. Install light bulb into socket.

**Care Instructions:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.