


SLW-7302-TCR-1.5 (S-280-2-TCR)
Two Handle Widespread Lavatory Faucet
Installation Guide



Model Numbers	Specification
☐ SLW-7302-TCR-1.5 Two Handle Widespread Lavatory Faucet	Two Handle Widespread Lavatory Faucet featuring 8"-16" mounting configuration shall include ceramic cartridges, 3/8" copper supply lines, 1/2" IPS inlet connections, metal drain assembly and 1.5 gpm (5.7 L/min) aerator. Faucet shall be made from metal construction, plated in standard polished chrome finish.
Modifications	
☐ -1.0 CG 1.0 gpm (3.8 L/min) flow restrictor  Note: Append appropriate -suffix to model number.	
Warranty	
Limited Lifetime - to the original end purchaser in consumer/residential installations.  5 Years - for industrial/commercial installations. Refer to www.symmons.com/warranty for complete warranty information.	


## **Dimensions**

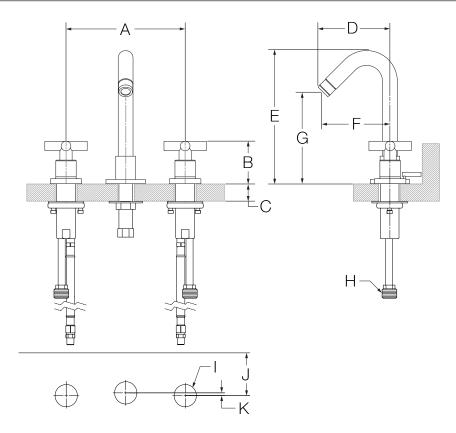

Measurements		
Α	8", 203 mm	
В	2-11/16", 68 mm	
	Deck Thickness Ref.	
C	Min. Ø 1", 25 mm	
	Max. Ø 2", 51 mm	
D	4-5/8", 117 mm	
E	7-1/2", 191 mm	
F	4-1/4", 108 mm	
G	5-7/8", 149 mm	
Н	1/2-14 NPSM	
	(3x) Hole Size	
ļ '	Ø 1-1/2", 38 mm	
J	To Backsplash	
	Min. 2-7/8", 73 mm	
K	3/16", 5 mm	

**Note:** Dimensions subject to change without notice.

## **Parts Breakdown**

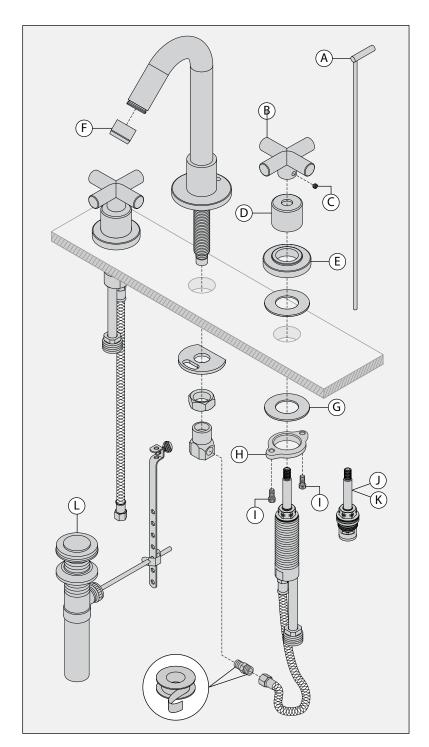

Replacement Parts		
Item	Description	on Part Number
Α	Lift Rod	P-134
В	Cross Hand	dle RL-017
С	Set Screv	V RL-017
В	Cross Hand	dle
С	Set Screv	WSF-TCR-KIT
D	Escutched	on WSI-TOIL-KII
E	Flange	
F	1.5 Aerato	l
'	1.0 Aerato	or FLR-121-1.0
G	Metal Wash	
H	Mounting N	I
1	Mounting Sci	
J	Cold Cartric	
K	Hot Cartrid	ge KN-114E
L	Metal Drai	n RL-154LR
Tools Required for Installation		
Adjustable Wrench		
Adjus	stable Wrench	
Alle	en Wrench: ndle (3 mm)	
Alle Hai	en Wrench:	
Alle Har Ph	en Wrench: ndle (3 mm)	
Alle Har Ph Sc	en Wrench: ndle (3 mm) illips Head crewdriver	

## **Notes:**

- 1) Apply a bead of silicone around the perimeter of trim installed
- 2) Apply plumber tape to all threaded connections.

▲ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.